





Motor doesn't assist

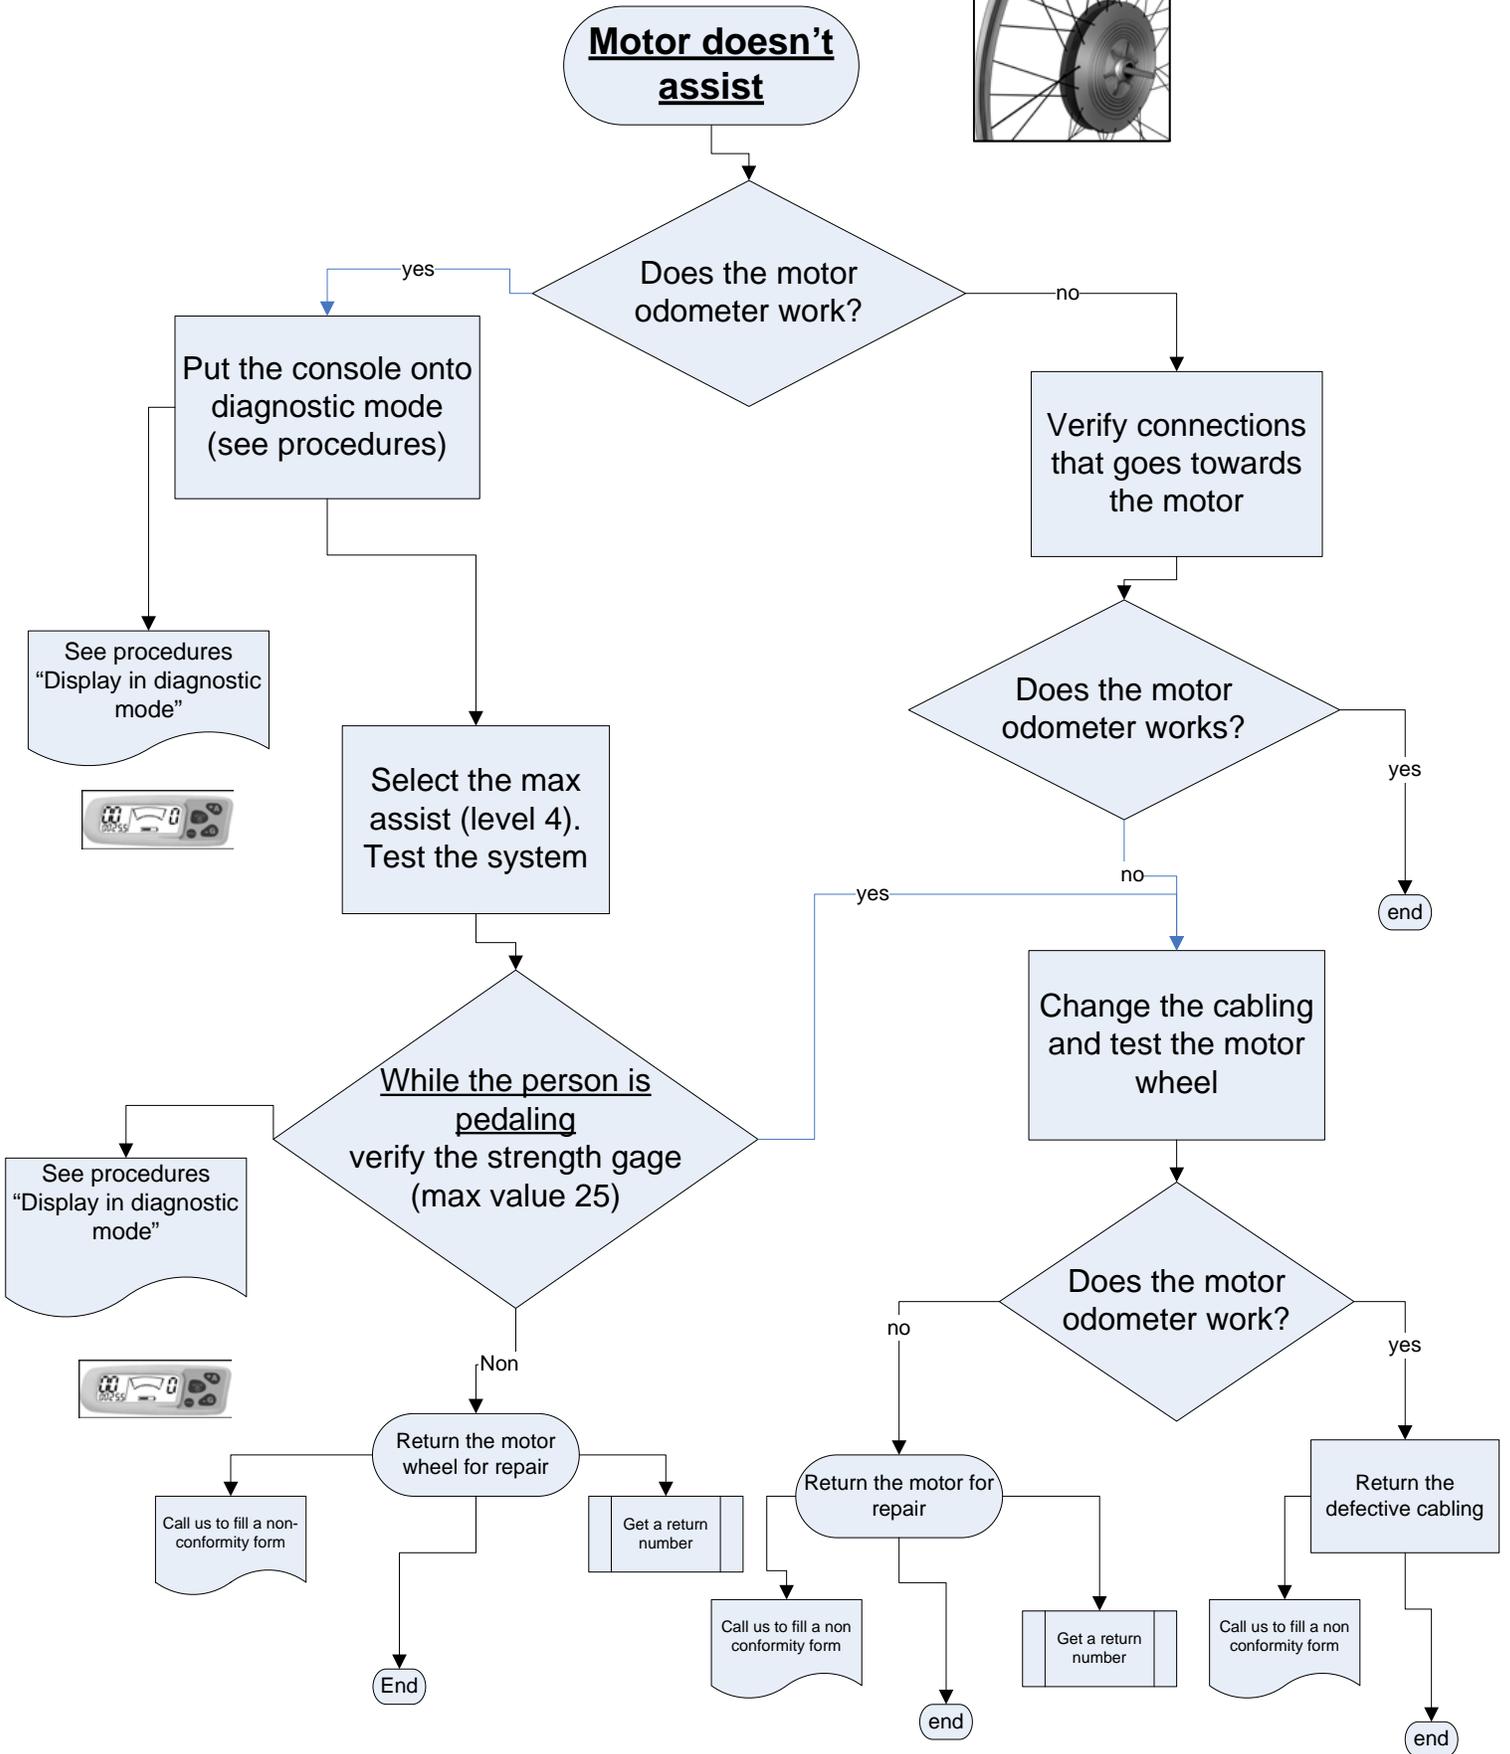


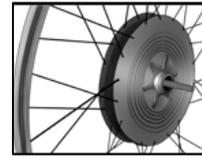

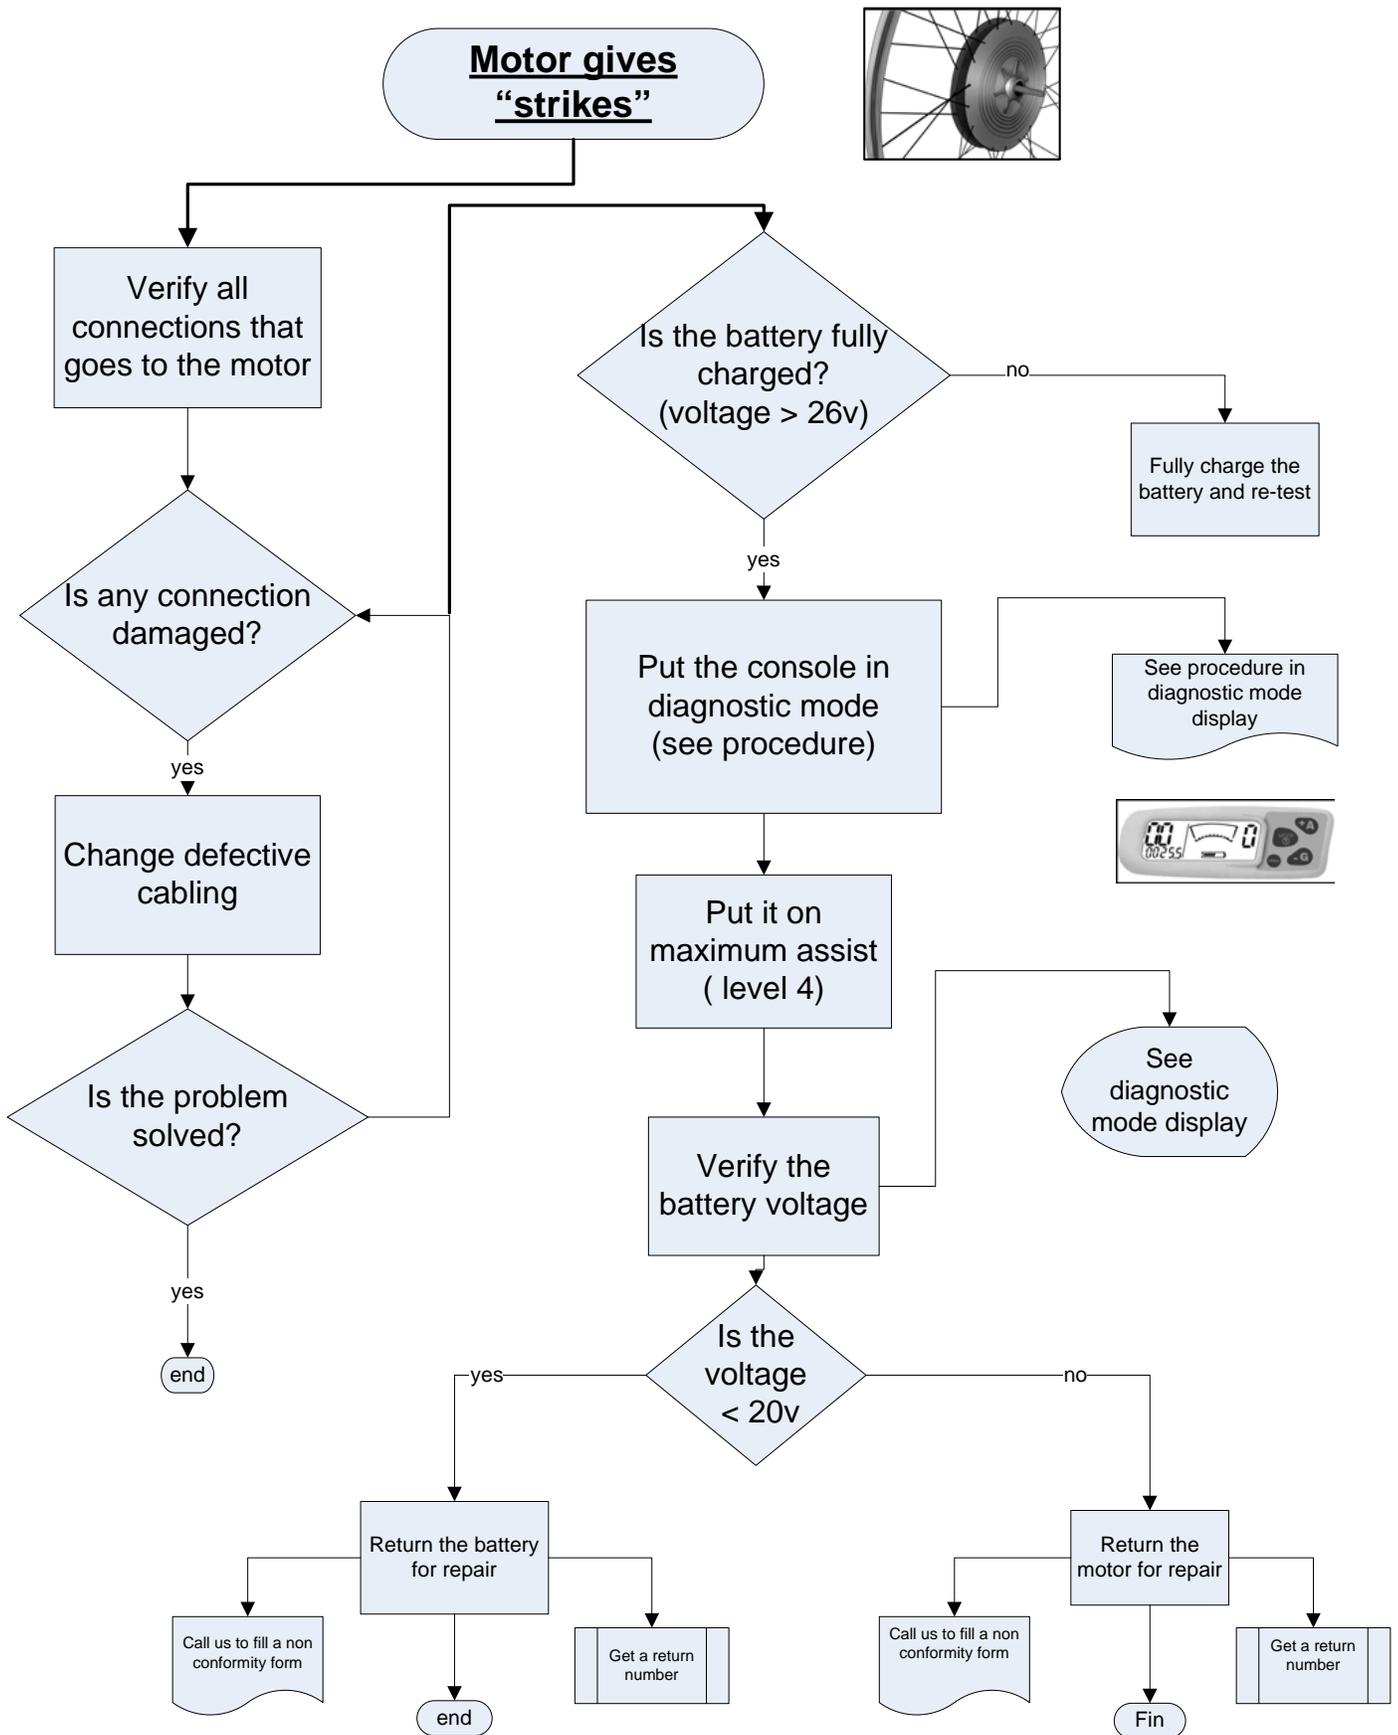


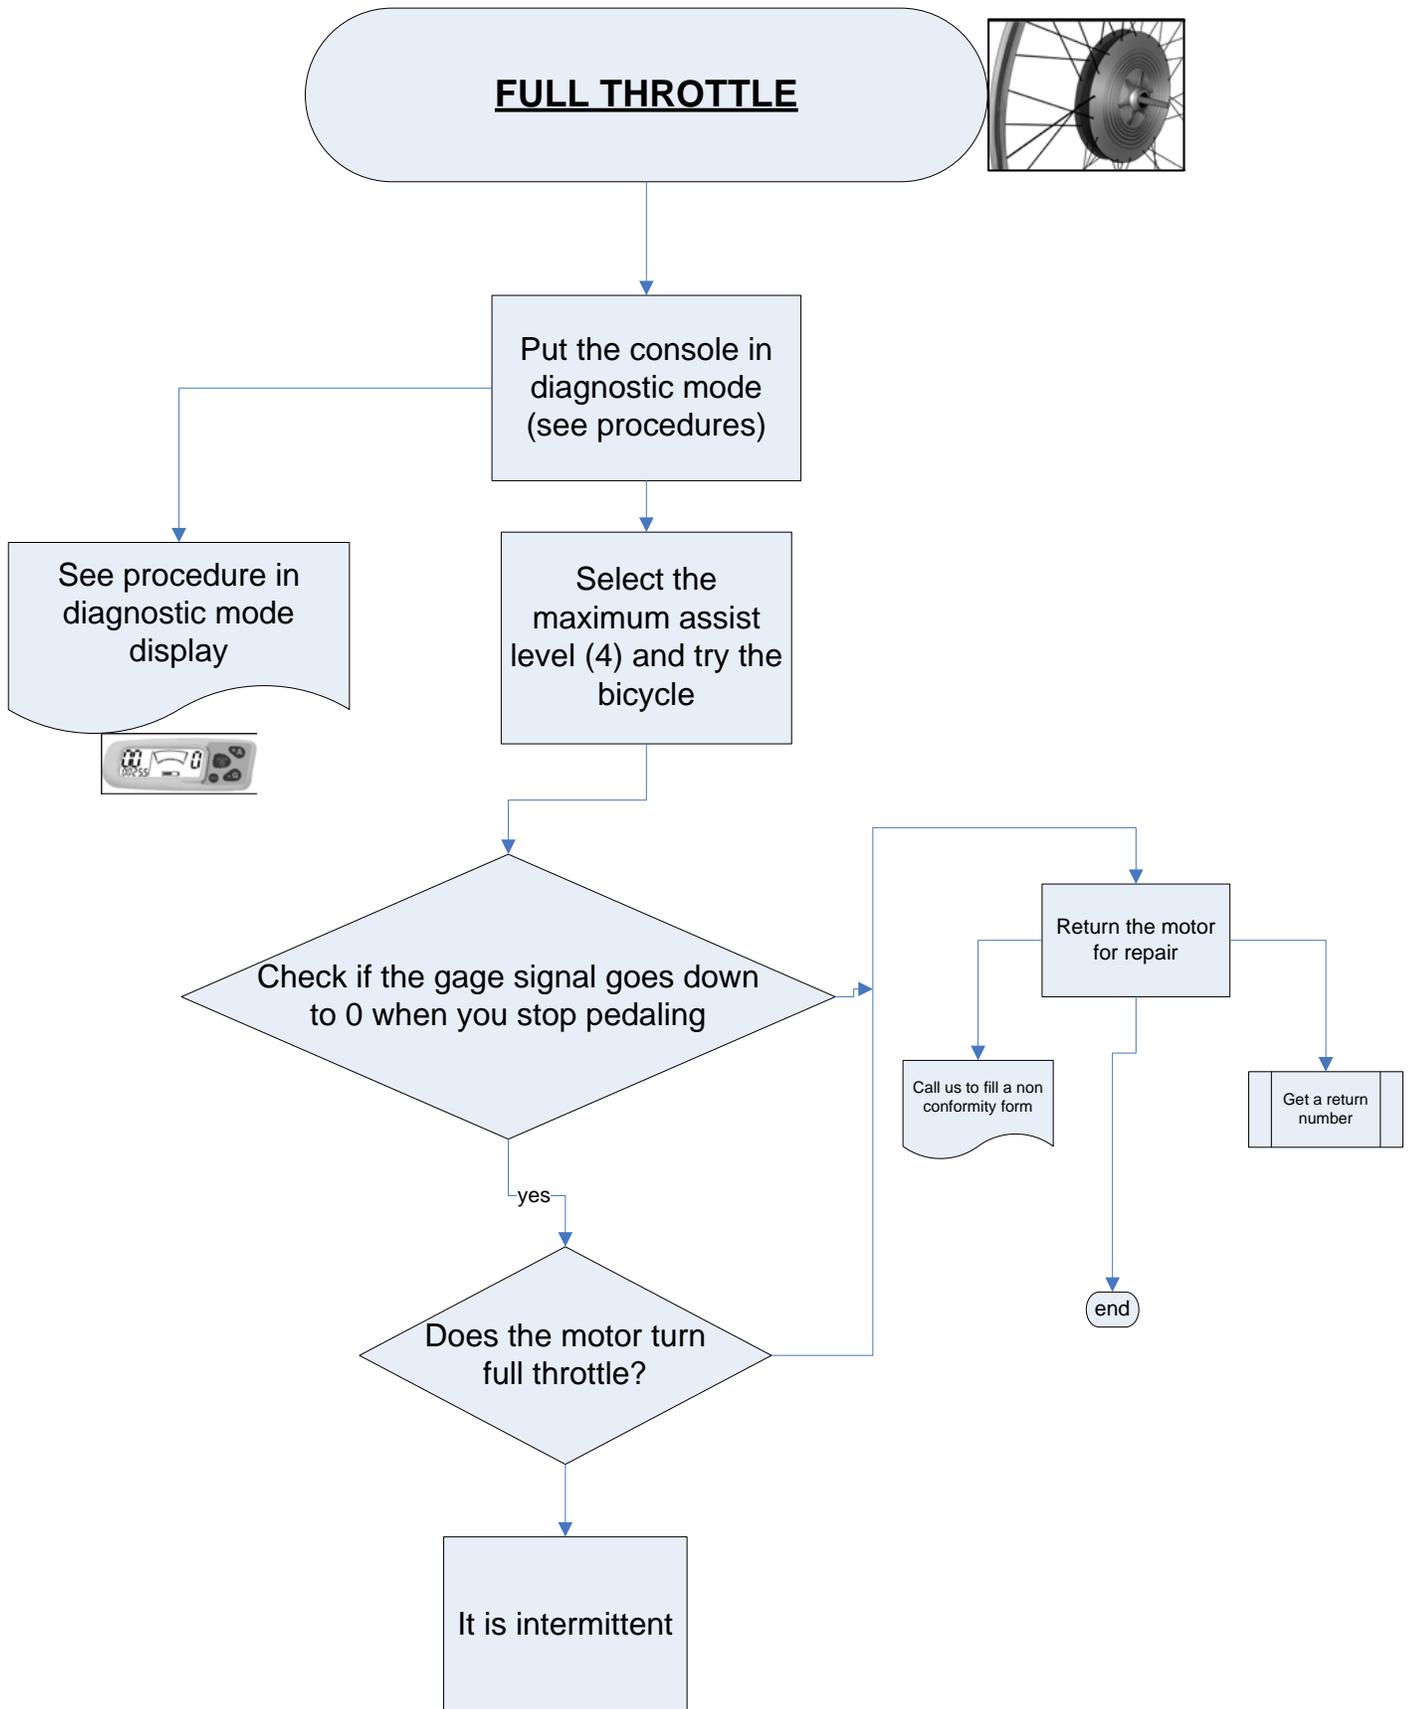


Console does not display properly

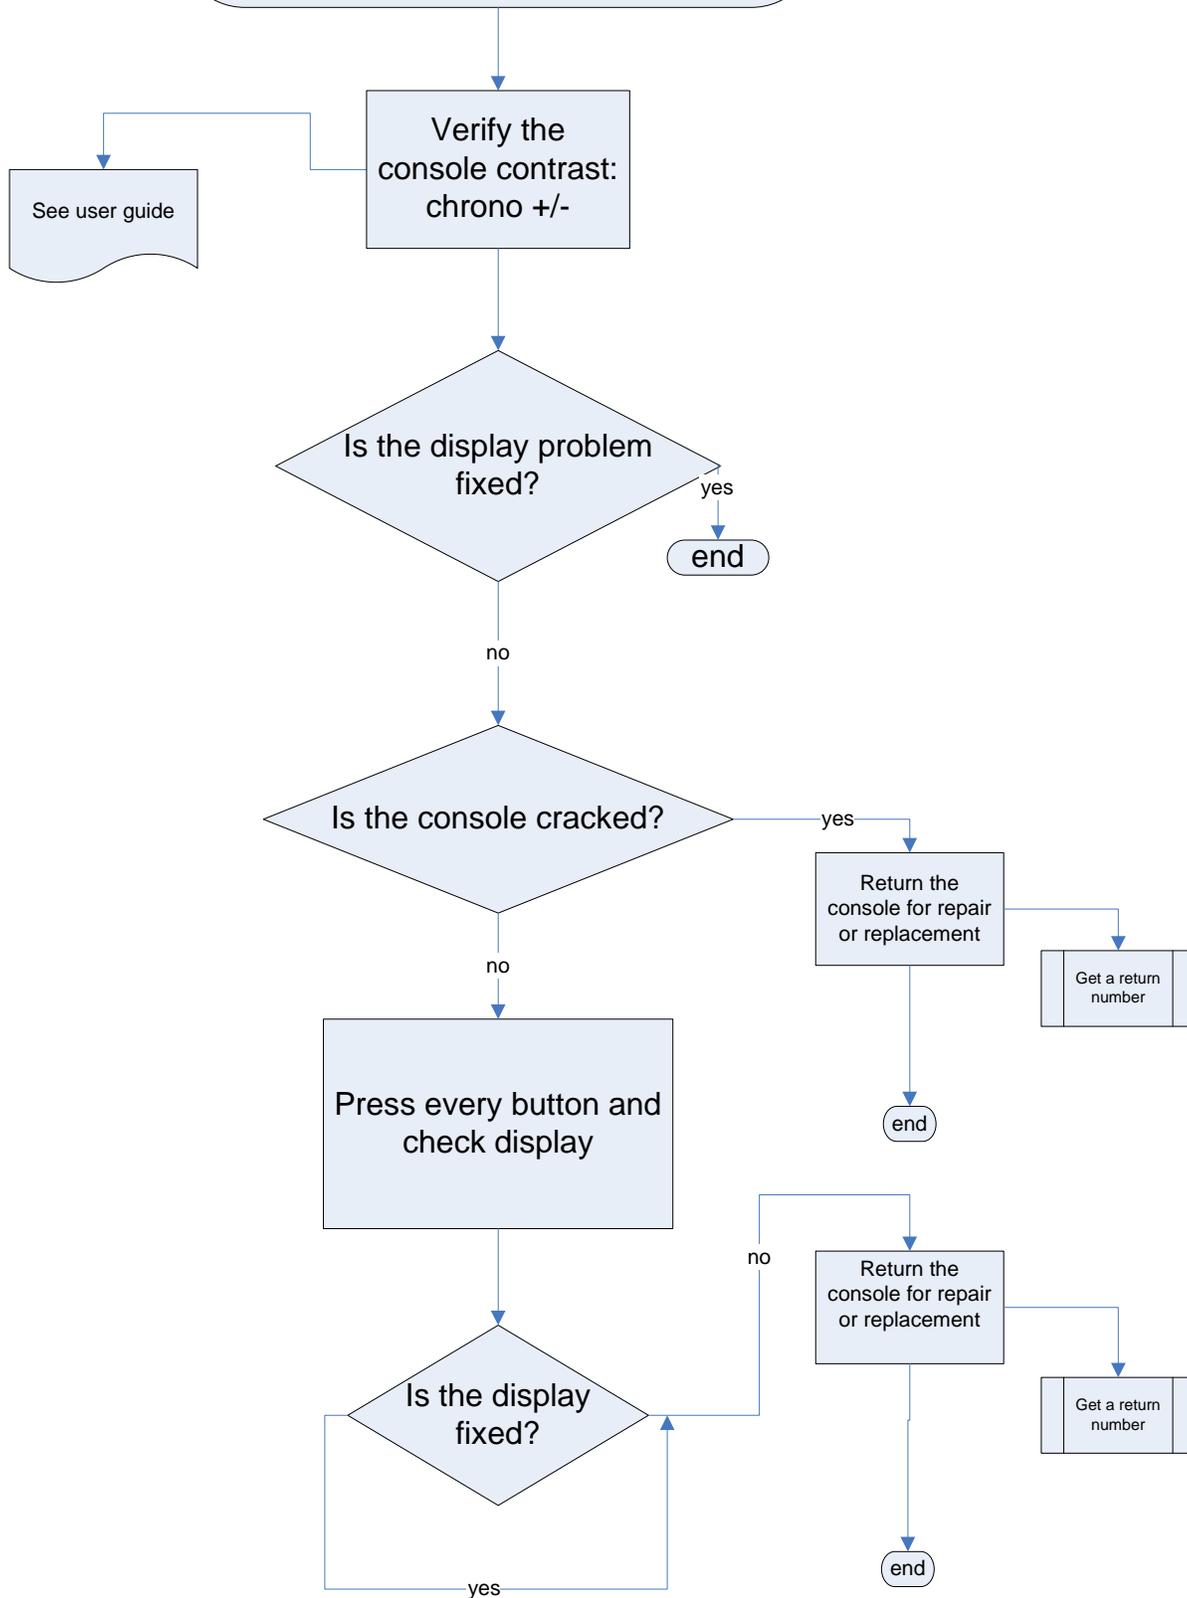

System does not turn on

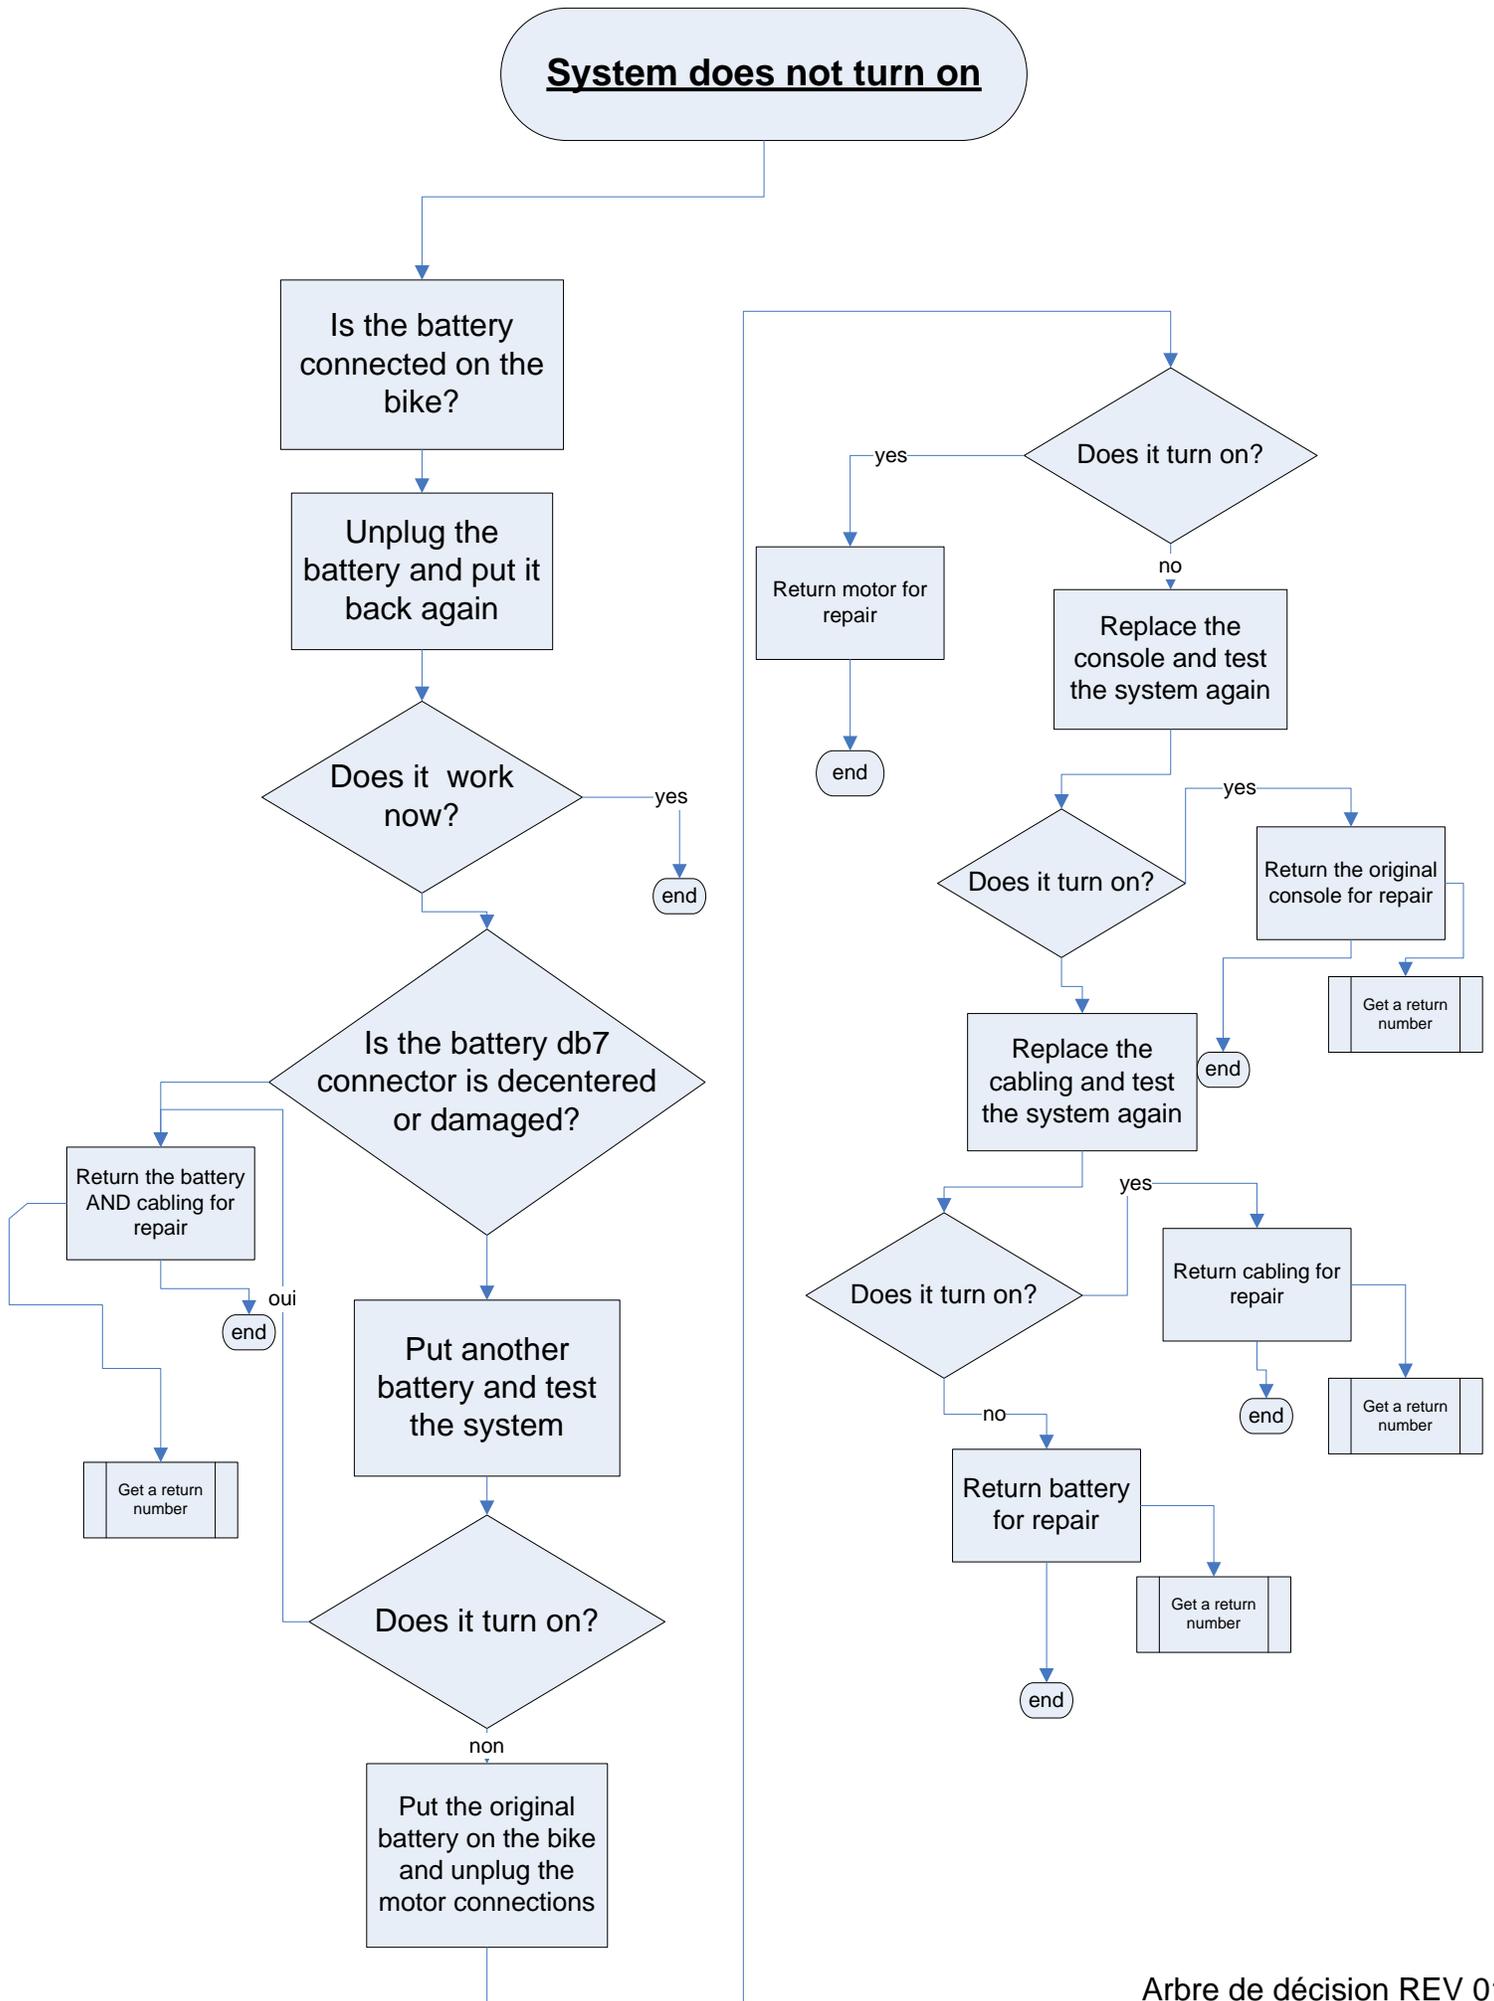

**Battery does not accept any charge,
the light does not turn on
(for Ni-MH batteries only)**

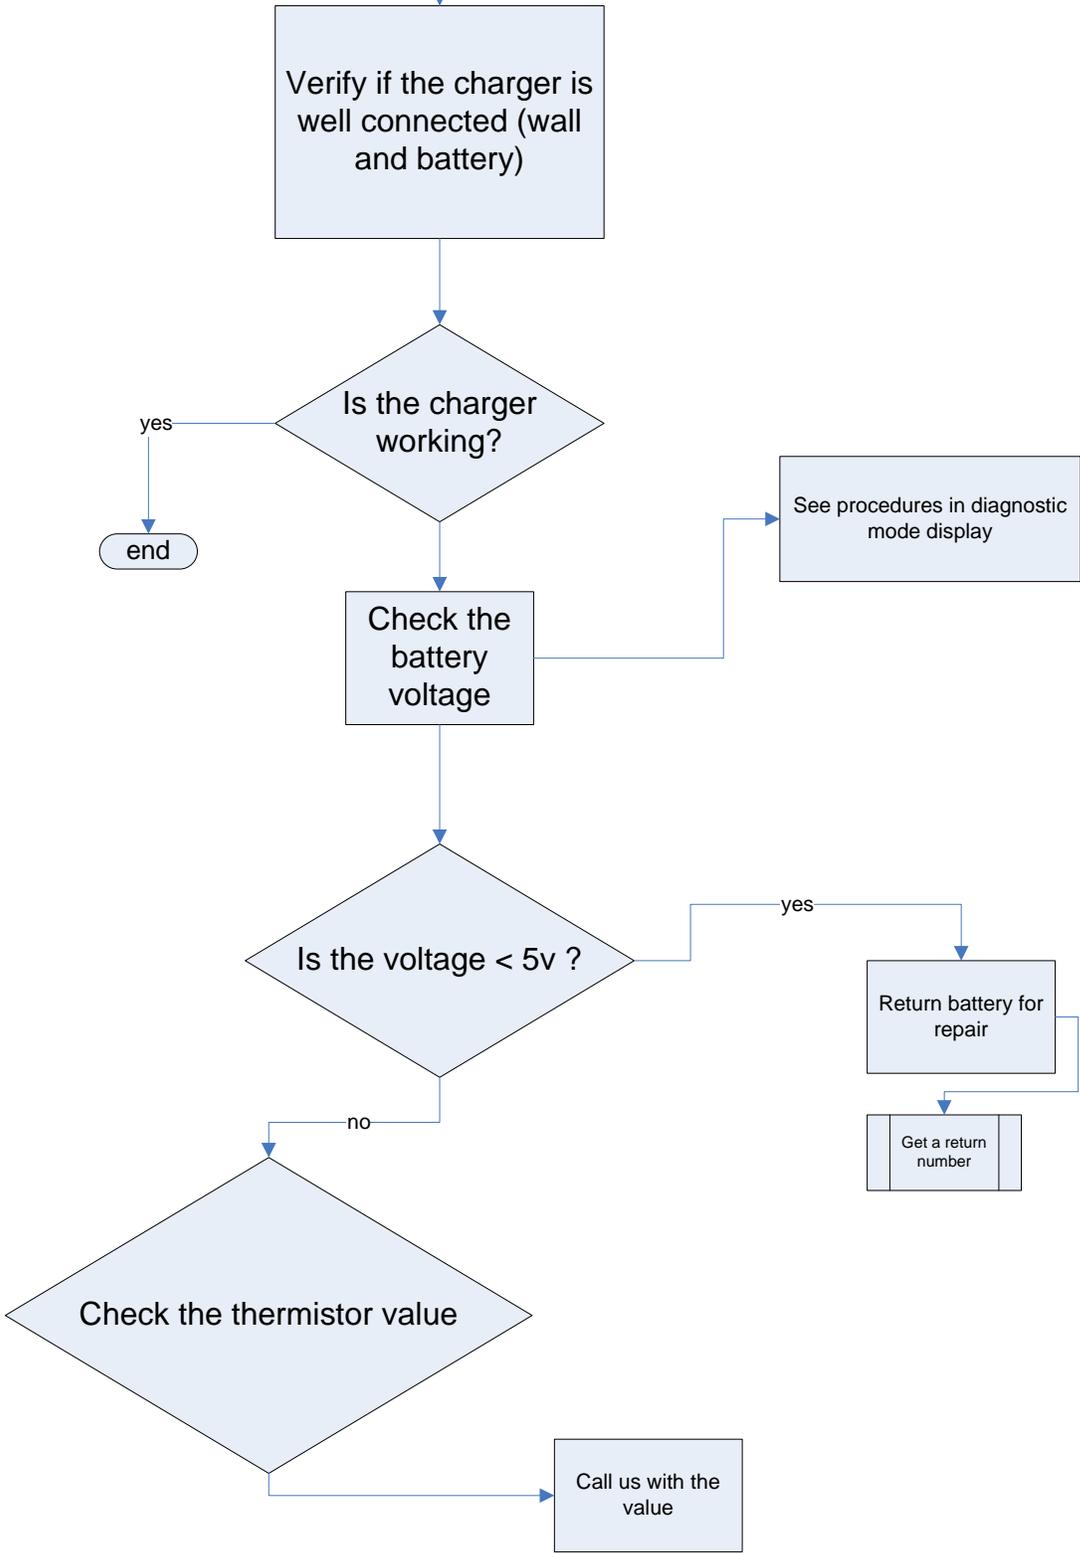



Console does not show battery status

